

 
 
801 22 ZV IN




DX
SX



READ
BEFORE
USING







New

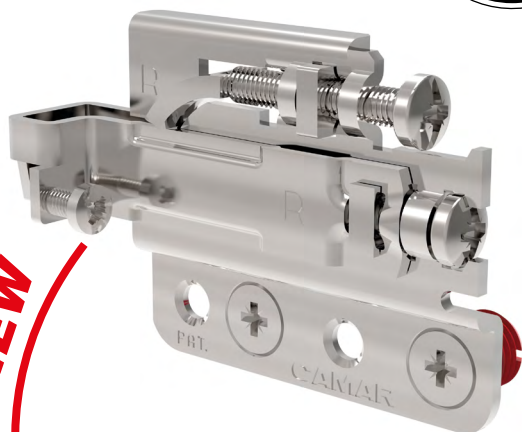 

NEW

   
 
875 AS

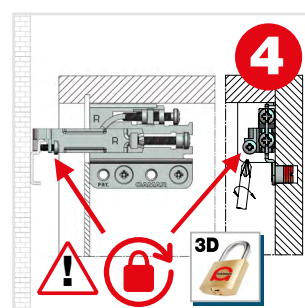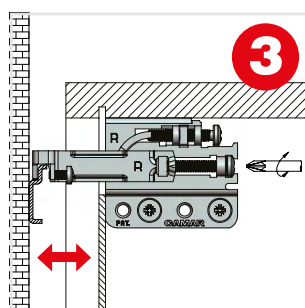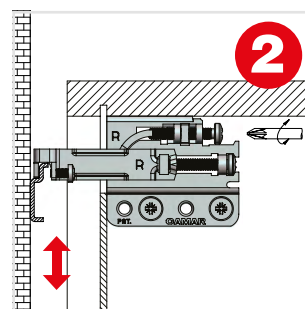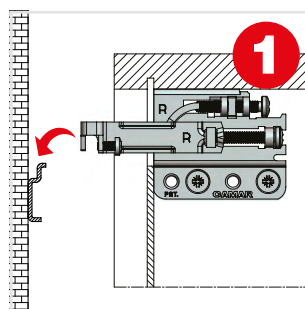


After assembly, verify that the anti-drop system has been activated.



  
Verificare dopo il montaggio l'avvenuta attivazione del sistema antigancio.

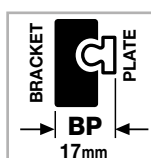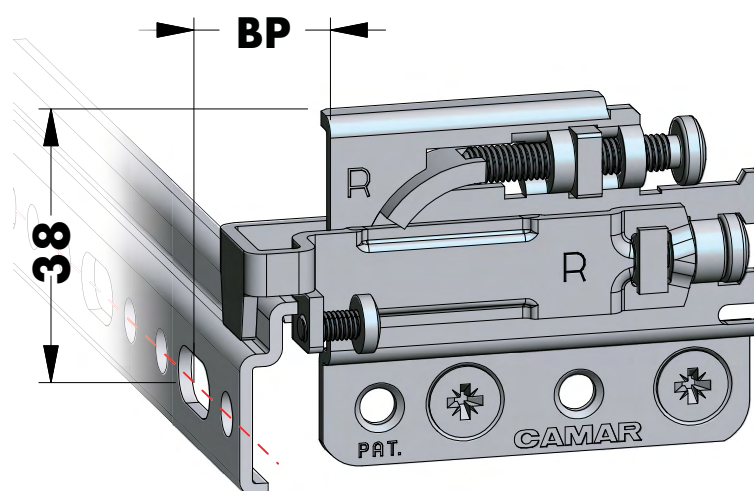





 
875 AS Z1 00 47 674
875 AS Z1 00 60 674
875 AS Z1 00 00 674-675
875 AS Z1 20 32 675



801 00 P2 AP 00 626
807 00 P2 MA 00 630

 

801 00 00 00 627

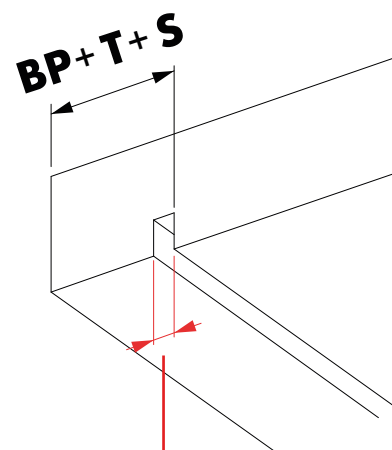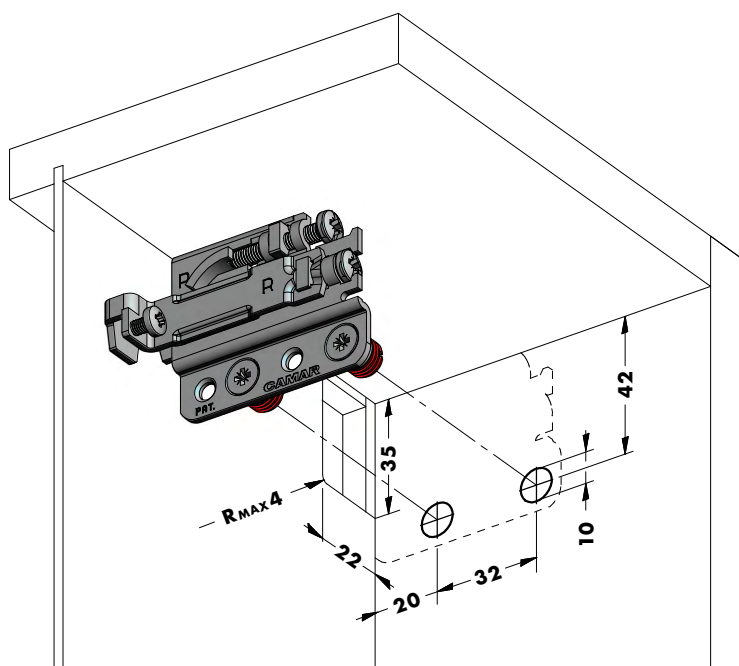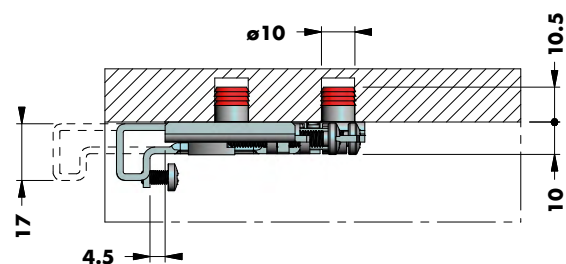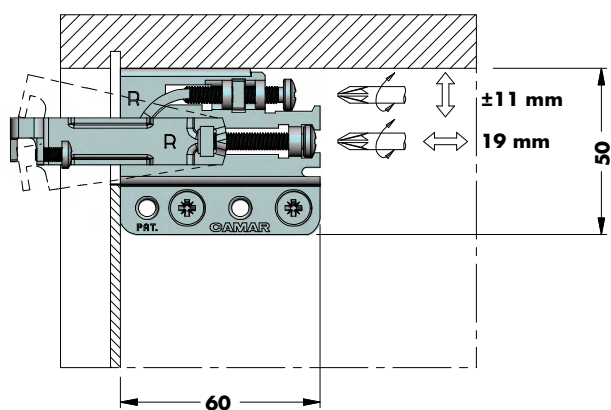     

801 00 00 00 max. 9 + S